

Canon

PowerShot S330
DIGITAL ELPH

PowerShot S200
DIGITAL ELPH



DIGITAL
IXUS 330

DIGITAL
IXUS v2

Quick Start Guide



This guide explains the required operations the first time the camera is used, as well as how to install the software and download images to a computer.

For more information about usage precautions and detailed instructions, please refer to the manuals listed below.

Usage precautions	Camera User Guide
Camera's detailed operations	Camera User Guide
Simple software operations	Software Starter Guide
Detailed software operations (Windows®)	ZoomBrowser EX Software User Guide (A PDF file on the supplied CD-ROM)
Detailed software operations (Macintosh)	ImageBrowser Software User Guide (A PDF file on the supplied CD-ROM)

Please refer to the *Troubleshooting* section of the *Software Starter Guide* if you have trouble installing the software or downloading images.

 
Do not connect the camera to the computer before the software is installed.

CDI-E062-010

© 2002 CANON INC.


Step 1 Preparing the Camera

A. Charge the battery pack. (Battery charger types vary by region.)

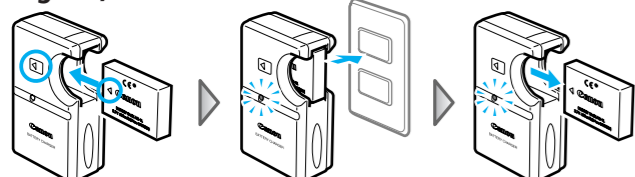


Place the battery pack in the battery charger and plug the charger into an electrical outlet. The charging indicator shines red while charging and changes to green when the battery pack is charged. Charging the battery pack takes approximately 130 minutes.

 B. Install the battery pack.

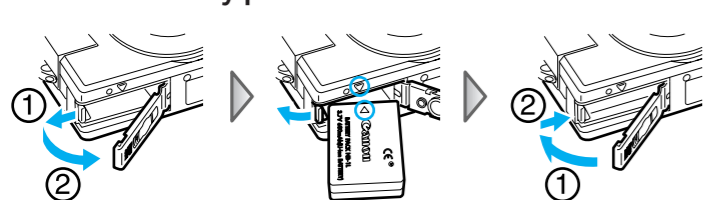

Slide the battery cover open. Press the battery lock while inserting the battery pack all the way in, aligning the arrows on the camera and battery pack. Slide the battery cover closed.

 C. Install the CF card.

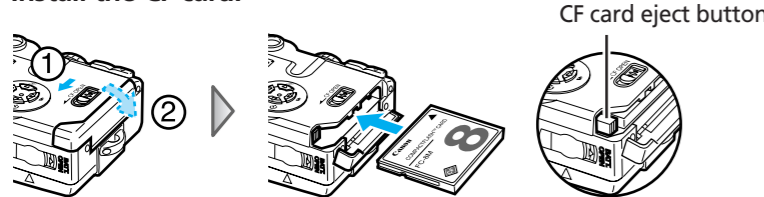


Slide the lock and open the CF card slot cover. Insert the CF card with its label facing upward until the slot's eject button fully extends. Close the CF card slot cover.


Step 2 Shooting

A. Set the mode dial (PowerShot S330 DIGITAL ELPH/DIGITAL IXUS 330) or the mode switch (PowerShot S200 DIGITAL ELPH/DIGITAL IXUS v2) to .

 PowerShot S330 DIGITAL ELPH/DIGITAL IXUS 330

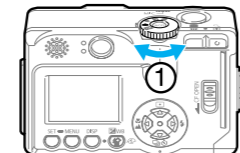

 PowerShot S200 DIGITAL ELPH/DIGITAL IXUS v2

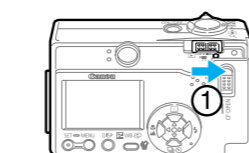


B. Turn on the power.


Press the ON/OFF button until the green power lamp lights.

  C. Set the date and time. (first time the camera is powered on)

 

 
 
PowerShot S330 DIGITAL ELPH/DIGITAL IXUS 330

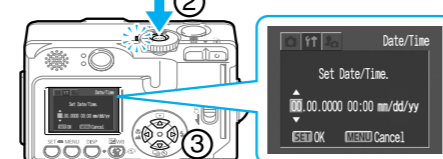

PowerShot S200 DIGITAL ELPH/DIGITAL IXUS v2

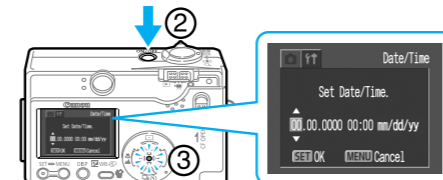 


The Set Date/Time menu will appear on the LCD monitor when the camera is first turned on.


Use the   buttons to select the items you wish to set, and the   buttons to change the value. To put the settings into effect, press the **SET** button.

D. Focus.

PowerShot S330 DIGITAL ELPH/DIGITAL IXUS 330

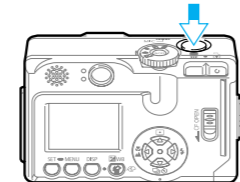

 
PowerShot S200 DIGITAL ELPH/DIGITAL IXUS v2

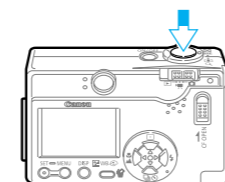


Point the camera in the direction of the subject you wish to shoot and press the shutter button halfway. The camera beeps twice when the subject is in focus.

E. Shoot.

 PowerShot S330 DIGITAL ELPH/DIGITAL IXUS 330

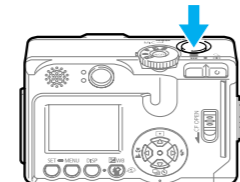

 PowerShot S200 DIGITAL ELPH/DIGITAL IXUS v2

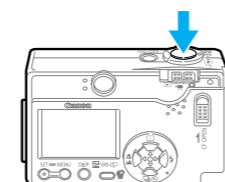


Press the shutter button fully. This activates the shutter and causes the shutter sound or the beep to sound once. The recorded image is displayed on the LCD monitor for approximately 2 seconds.


Turn off the power.

Press the ON/OFF button to turn the power off. Even if the ON/OFF button is not pressed, the power will automatically shut down 3 minutes after the last control is accessed.

 PowerShot S330 DIGITAL ELPH/DIGITAL IXUS 330

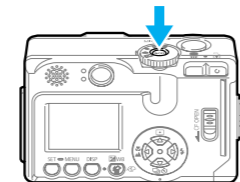

 PowerShot S200 DIGITAL ELPH/DIGITAL IXUS v2

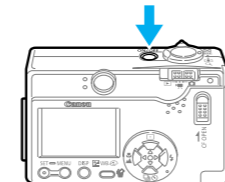

Step 3 Reviewing an Image

A. Set the mode dial (PowerShot S330 DIGITAL ELPH/DIGITAL IXUS 330) or the mode switch (PowerShot S200 DIGITAL ELPH/DIGITAL IXUS v2) to .

 
B. Turn on the power.

Press the ON/OFF button until the green power lamp lights. The last recorded image appears in the LCD monitor.


C. View the images.

Use the   buttons to display the image you wish to see.

PowerShot S330 DIGITAL ELPH/DIGITAL IXUS 330

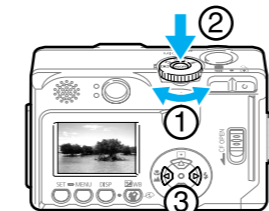

 
PowerShot S200 DIGITAL ELPH/DIGITAL IXUS v2

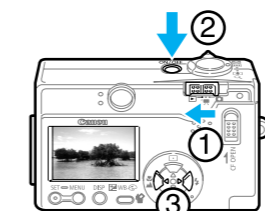


Erasing Images

Display the unwanted image with the   buttons and press the  button.

 PowerShot S330 DIGITAL ELPH/DIGITAL IXUS 330

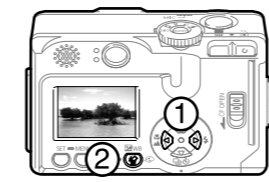


 PowerShot S200 DIGITAL ELPH/DIGITAL IXUS v2

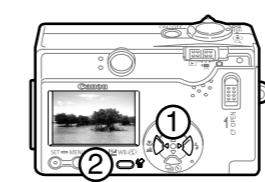


When the confirmation screen appears, check that [Erase] is selected and press the **SET** button.

 PowerShot S330 DIGITAL ELPH/DIGITAL IXUS 330

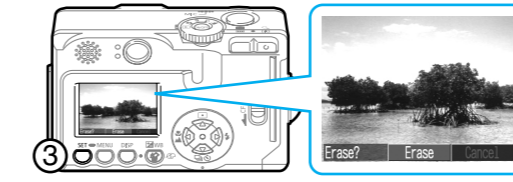


 PowerShot S200 DIGITAL ELPH/DIGITAL IXUS v2

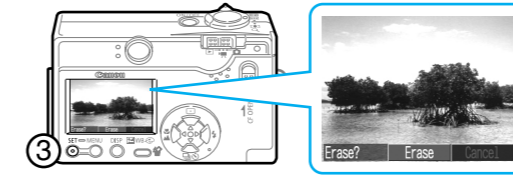

Printing Images without Using a Computer

 This camera is compatible with the direct print function. By connecting it with a single cable to a direct print function compatible printer (optional) or a direct print function compatible Bubble Jet printer, you can easily print your images with simple operations.

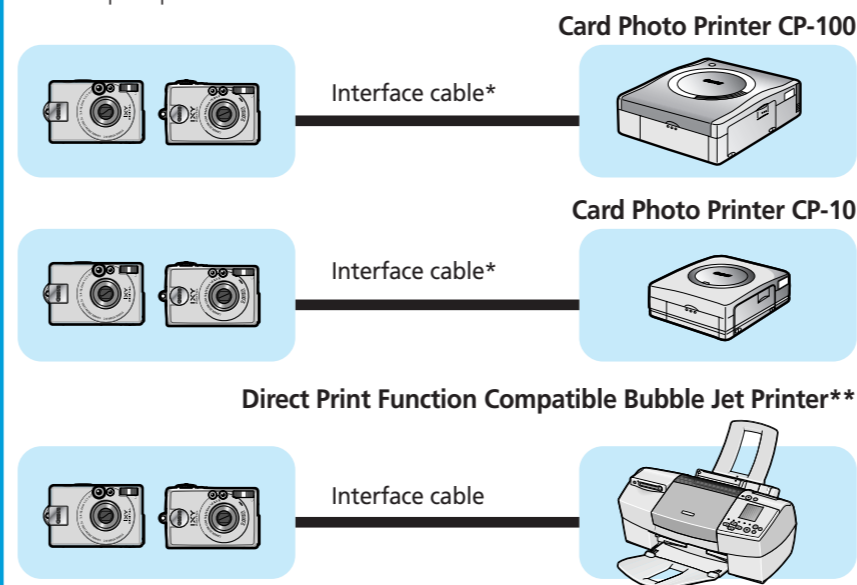

* The interface cable is included with the direct print function compatible printer.

** To find out if your Bubble Jet printer is compatible with the directprint function and for detailed information regarding the Bubble Jet printer, please refer to the documentation that came with your printer.

Step 4 Installing the Software on the Windows Platform

 
Macintosh users, please refer to the reverse page.

A. Install the software.

- Do not connect the camera to the computer before the software is installed.
- The USB driver will start its installation procedures after the camera has been connected to the computer.

- For more information about the system requirements, please refer to the *Software Starter Guide*.
- Users of Windows 2000 and Windows XP Professional must first log in as an Administrator (computer system administrator) to install programs.
- Close any programs that are running.

- Set the Canon Digital Camera Solution Disk in the computer's CD-ROM drive. The installer panel will display automatically. If the installer panel does not appear automatically, double-click the CD-ROM icon from [My Computer] and double-click the [Setup] icon.
- Click [Software Installation] and follow the onscreen instructions that appear.

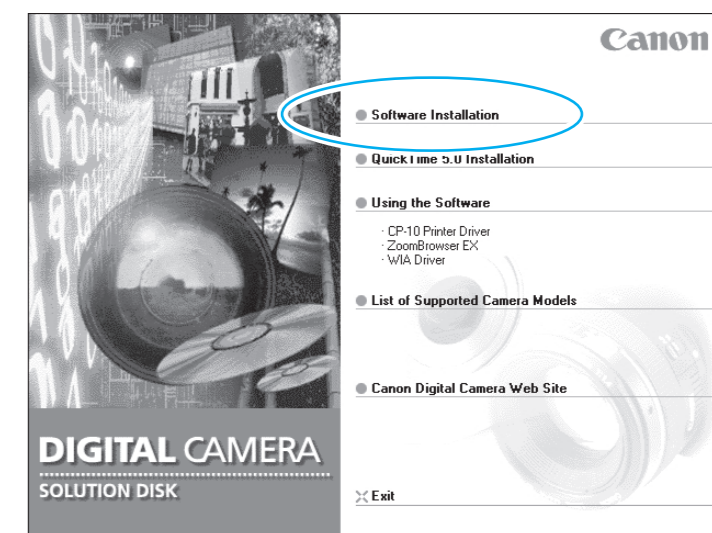


- When [Select Components] appears, select your camera model name and click [Next].
- Follow the onscreen instructions. The software required for the camera will be installed.
- When the Installer Panel displays again, after the installation is complete, click [Exit]. For the USB driver to install correctly the **Canon Digital Camera Solution Disk must be removed from the computer.**


B. Connect the camera to the computer.

- When installing the driver, turn the camera's power off before connecting the cable to the computer.

 - Connect the USB cable to the computer. If the computer has two USB ports, you can use either one of them.

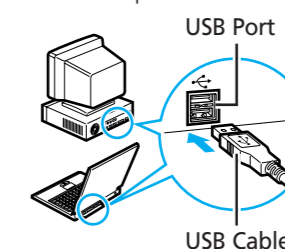

 - Connect the USB cable to the camera. Open the terminal cover and connect the cable.

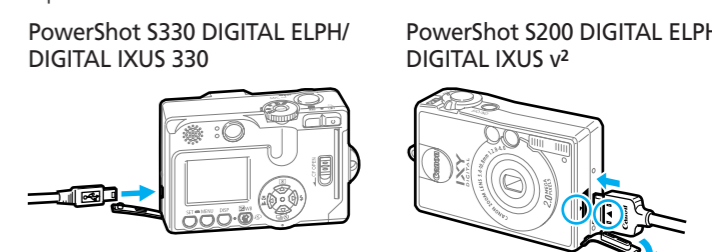


Continued on the reverse page.

Step 4 Installing the Software on the Windows Platform (continued)

 
 
C. Install the driver.

The TWAIN or WIA driver is required when the camera is connected to the computer. The installation procedures vary between Windows versions.

- a. Set the mode dial (PowerShot S330 DIGITAL ELPH/DIGITAL IXUS 330) or the mode switch (PowerShot S200 DIGITAL ELPH/DIGITAL IXUS v2) to .
- b. Turn the camera's power on.
Press the ON/OFF button until the green power lamp lights.

PowerShot S330 DIGITAL ELPH/
DIGITAL IXUS 330

PowerShot S200 DIGITAL ELPH/
DIGITAL IXUS v2

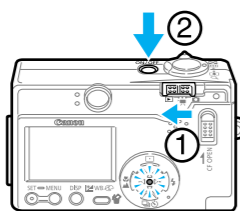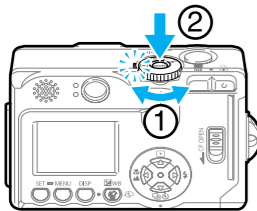


Windows 98

- c. Install the TWAIN driver.

The Insert Disk dialog appears. Click [OK] without inserting the Canon Digital Camera Solution Disk.

 
Click the [Browse] button.

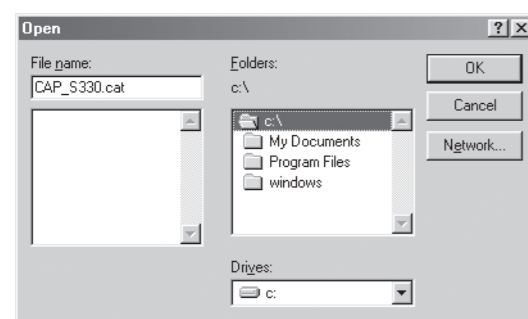

Double-click the drive (usually the [C:\] drive) on which you installed the software to display all of its folders.

PowerShot S330 DIGITAL ELPH/ DIGITAL IXUS 330:
Double-click the following folders in the order [Program Files], [Canon], [IXY300A PSS330 IXUS330 TWAIN].

 PowerShot S200 DIGITAL ELPH/ DIGITAL IXUS v2:
Double-click the following folders in the order [Program Files], [Canon], [IXY200A PSS200 IXUSV2 TWAIN].

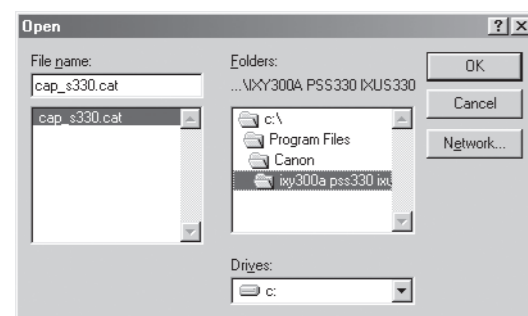

Click [OK]. When the Insert Disk dialog reappears, click [OK].

The driver will install itself automatically and the Event dialog will display, allowing you to select a program to start.

- d. Select a program to start.
Select [Canon ZoomBrowser EX] and click [OK]. ZoomBrowser EX will start.
Confirm that [Display images in the Camera Window] is selected and click the [Finish] button.

Windows 2000

- c. Install the TWAIN driver.
The Add New Hardware Wizard will appear and automatically install the TWAIN driver.
Once the installation is complete, the Event dialog will display, allowing you to select a program to start.
If you are prompted to restart the computer, restart the computer according to the onscreen messages.

- d. Select a program to start.
Select [Canon ZoomBrowser EX] and click [OK]. ZoomBrowser EX will start.
Confirm that [Display images in the Camera Window] is selected and click the [Finish] button.

Step 4 Installing the Software on the Windows Platform (continued)

Windows Me

- c. Install the WIA driver.

The Add New Hardware Wizard will appear and automatically install the WIA driver.

Once the installation is complete, the Scanners and Cameras Wizard start-up event dialog appears. Click [Cancel].

- d. Start ZoomBrowser EX.

Double-click the [Canon ZoomBrowser EX] icon on the desktop. ZoomBrowser EX starts.

A confirmation message will appear the first time ZoomBrowser EX starts, asking whether you wish to register the [My Pictures] folder in ZoomBrowser EX. Click [Yes] or [No].

- e. Select a camera.

In the Tree View Area, click [Canon Camera].

Windows XP

- c. Install the WIA driver.

The Found New Hardware Wizard will appear and automatically install the WIA driver.

Once the installation is complete, The ZoomBrowser start-up event dialog and the Scanners and Cameras Wizard start-up event dialog will both display.

- d. Select a program to start.

Click [OK] in the ZoomBrowser EX start-up event dialog. ZoomBrowser EX will start.

 
Confirm that [Display images in the Camera Window] is selected and click the [Finish] button.

The Camera Window will open and display the camera images.



Step 5 Downloading Images to a Computer (Windows)


- A. Create a new folder for saving images from the camera.

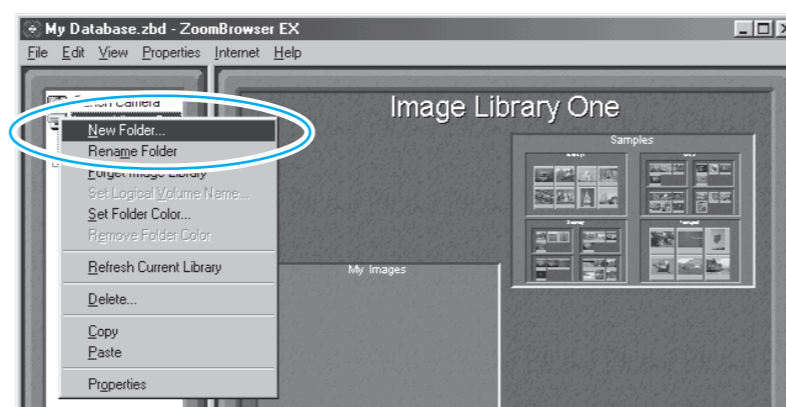

In the Tree View Area, right-click the [Image Library One] folder, select [New Folder] from the pop-up menu and input a folder name. (For example, [Travel] or [Wedding])
Select the newly created folder.

Step 5 Downloading Images to a Computer (Windows) (continued)

 - B. Download the images from the camera.

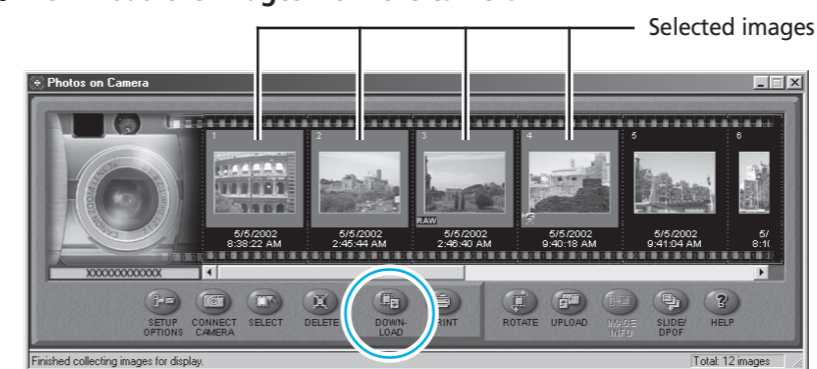

Select the images you wish to download from the Camera window and click the [Download] button.
The selected images are saved to the computer disk and appear in the Browser Display Area.

• The folder you created above normally appears within the [C:\Program Files\Canon\ZoomBrowser EX\Image Library One] folder. The downloaded image files are saved to the folder you created.

Step 4 Installing the Software on the Macintosh Platform

- A. Install the software.

- For more information about the system requirements, please refer to the *Software Starter Guide*.
- Close any programs that are running.

- a. Set the Canon Digital Camera Solution Disk in the computer's CD-ROM drive.

Mac OS 8.6 - 9.2: Double-click the CD-ROM icon, followed by the [Mac OS 8/9] and [Canon Digital Camera Installer] icons.

Mac OS X: Double-click the CD-ROM icon, followed by the [Mac OS X] and [Canon Digital Camera Installer] icons.

- b. Click [Digital Camera Software Installation].



 
Mac OS 8.6 - 9.2 screen shot shown.

- c. Follow the onscreen instructions.
The software required for the camera will be installed.

Step 5 Downloading Images to a Computer (Macintosh)

- A. Connect the USB cable to the computer.

If the computer has two USB ports, you can use either one of them.

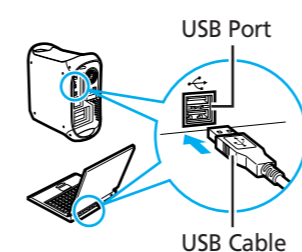



Step 5 Downloading Images to a Computer (Macintosh) (continued)


- B. Connect the USB cable to the camera.

Open the terminal cover and connect the cable.

PowerShot S330 DIGITAL ELPH/
DIGITAL IXUS 330

  PowerShot S200 DIGITAL ELPH/
DIGITAL IXUS v2

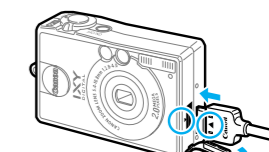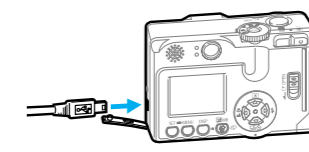



- C. Set the mode dial (PowerShot S330 DIGITAL ELPH/DIGITAL IXUS 330) or the mode switch (PowerShot S200 DIGITAL ELPH/DIGITAL IXUS v2) to .

- D. Turn the camera's power on.

Press the ON/OFF button until the green power lamp lights.

PowerShot S330 DIGITAL ELPH/
DIGITAL IXUS 330

  
PowerShot S200 DIGITAL ELPH/
DIGITAL IXUS v2

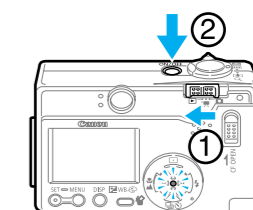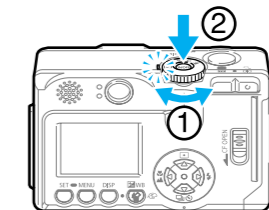

Mac OS 8.6 - 9.2 ImageBrowser will start and open the ImageBrowser Automation Wizard dialog. Confirm that [Display Images] is selected and click the [OK] button.

Mac OS X Double-click the [Canon ImageBrowser] icon on the desktop. Once ImageBrowser is started, click [Canon Camera] in the Explorer View section.

 - E. Set the communication settings (first time connection only)

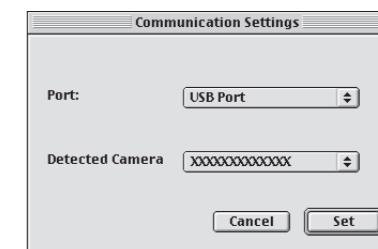

Mac OS 8.6 - 9.2 screen shot shown.

Confirm that [USB Port] and your camera model name are selected and click the [Set] button.
The Camera window will open and display the camera images.

 
- F. Create a new folder for saving images from the camera.



Mac OS 8.6 - 9.2 screen shot shown.

In the Explorer View section, select [Macintosh HD]. From the [File] menu, select [New Folder] and input a folder name. (For example, [Travel] or [Wedding])
Select the newly created folder.

- G. Download the images from the camera.

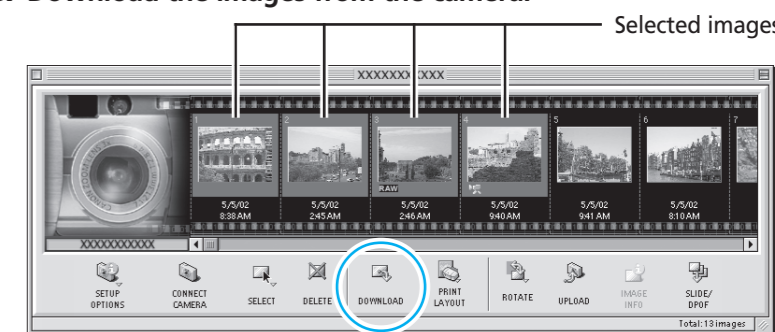

Select the images you wish to download in the Camera window and click the [Download] button.
The selected images are saved to the computer and appear in the Browser area.